



## TECHNICAL SPECIFICATIONS: CABINET TAMPER FLX S

According to SSF alarm class 3-4, breakage protection must be used for NOVA FLX S. This sheet metal plate is screwed into the wall and the tamper connector mounted in the housing is moved to the end of the corner. The tamper switch is then adjusted to break against the enclosure door.

Article name:	Cabinet tamper FLX S
Article number:	A-LK00000FS01
E-number:	5257490
Material:	Galvanized steel
Weight:	35 grams
Manufacturer:	Milleteknik
Country of origin:	Sweden

## MOUNTING IN FLX S

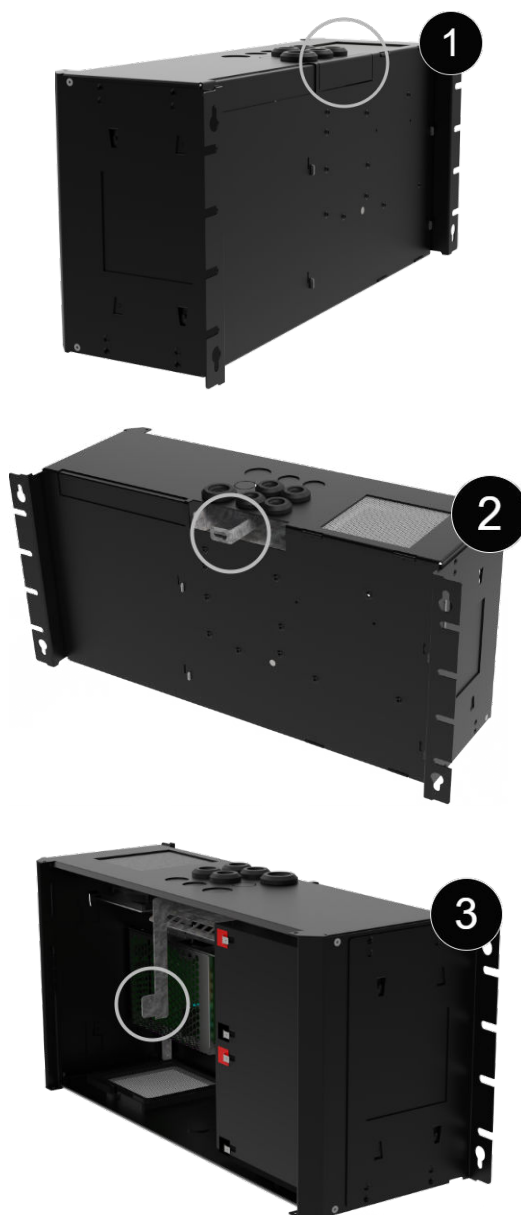

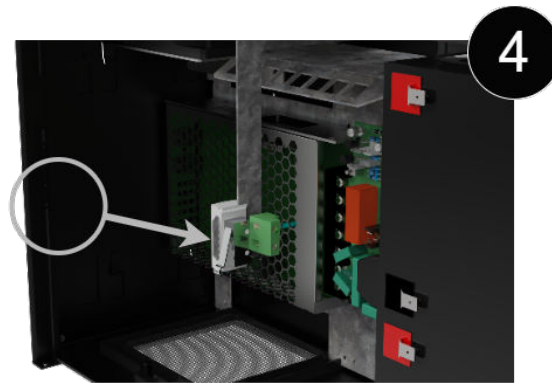

### Install Cabinet tamper FLX S

Step	Explanation
1	Remove the plate on the back of the enclosure.
2	Screw Cabinet tamper FLX S to the wall.
3	Cabinet tamper FLX S should now be mounted so that there is a distance to the door.
4	Move the tamper switch from the side of the housing to the Cabinet tamper FLX S



#### TIP


After moving the tamper switch, it may need to be adjusted. Check that the tamper switch breaks against the enclosure door. (When correctly installed tamper switch does not give an alarm for tamper when the door is closed.)



## TECHNICAL SPECIFICATIONS: CABINET TAMPER FLX M AND FLX L

According to SSF alarm class 3-4, breakage protection must be used for NOVA FLX M, NOVA FLX L. This sheet metal plate is screwed into the wall and the tamper connector mounted in the housing is moved to the end of the corner. The tamper switch is then adjusted to break against the enclosure door.

Article name:	Cabinet tamper FLX M
Article number:	A-LK00000FM01
E-number:	5257491
Material:	Galvanized steel
Weight:	55 grams
Manufacturer:	Milleteknik
Country of origin:	Sweden

## MOUNTING IN FLX M AND FLX L

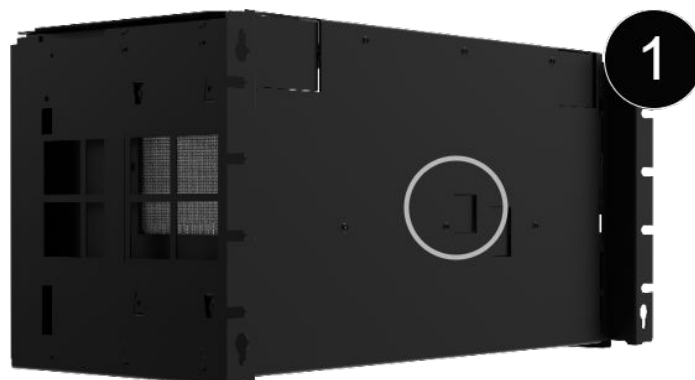

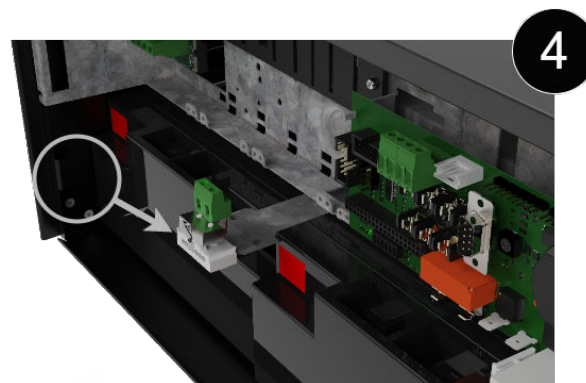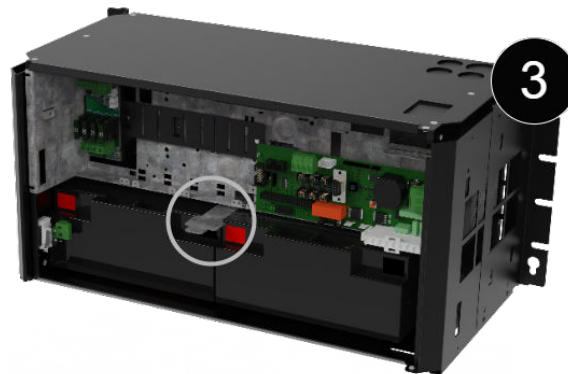

#### Install Cabinet tamper FLX M / L

Step	Explanation
1	Remove the plate on the back of the enclosure.
2	Screw Cabinet tamper FLX M / L to the wall.
3	Cabinet tamper FLX M/L should now be mounted so that there is a distance to the door.
4	Move the tamper switch from the side of the housing to the Cabinet tamper FLX M / L



#### TIP

After moving the tamper switch, it may need to be adjusted. Check that the tamper switch breaks against the enclosure door. (When correctly installed tamper switch does not give an alarm for tamper when the door is closed.)

## ABOUT THIS DOCUMENT

Article number of the document: 350-236

This document is subject to change without prior notice.

All information is published with reservation for printing errors.

## ABOUT TRANSLATION OF THIS DOCUMENT

User manual and other documents are in the original language in Swedish. Other languages are machine translated and not reviewed, errors may occur.

## ADDRESS AND CONTACT DETAILS

Milleteknik AB  
Ögärdesvägen 8 B  
S-433 30 Partille  
+46 31 340 02 30  
[www.milleteknik.com](http://www.milleteknik.com)